



BrandFactory
Danmark A/S
Måløv Teknikerby 2
DK-2760 Måløv



Tlf.: +45 4492 1277
info@brandfactory.dk

brandfactory.dk


INSTALLATION INSTRUCTIONS

INSTALLATION TECHNIQUE FOR THE APPLICATION OF STREAMERS USING WATER ON WINDOWS, LACQUERED PLATES AND FLAT SURFACES.

1. Clean the site, where the product will be applied, carefully with cleaning spirits and a lint-free cloth.
2. Put three drops of dish soap with water in a spray bottle and spray onto the application site.
3. Put the foil with the front side against the wet surface, so the back side of the paper is facing you. Pull the back paper from the corner.
4. Spray the sticky side with the spray soap until it is completely wet.
5. Turn the foil, so that the sticky side is facing towards the application site and put the streamer in place.
6. Afterwards thoroughly scrape away the water with a window scraper/cleaner. Start from the top and work down towards the bottom.
7. Dry carefully with a clean, dry cloth, removing the rest of the water.

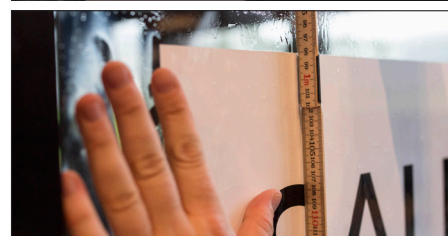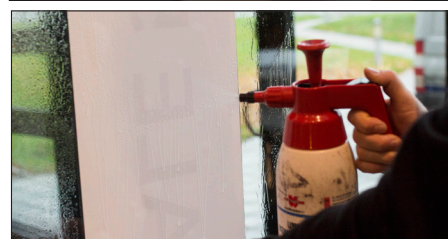

Tommestok

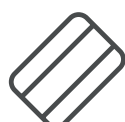

Skraber



Sæbevand